

To activate inertia braking as backup to electric braking

see note below



Hinge allows bar to flip back so coupler can work in inertia braking mode

Bar locks inertia coupler from pushing in during electric braking

Bolt holds lockout bar down when electric brakes are in operation

Remove this bolt and flip the bar back then coupler will apply the brakes with out electric through the parking brake system

Or remove the bar completely and store in a known place for any future need

Note

Keep in mind this method is not covered by a test certificate, use at owner's risk

For any questions go to www.sunpacer.co.za
or email pierre@sunpacer.co.za