


eBrake socket and plug wiring

7 pin socket, all pins female (1)

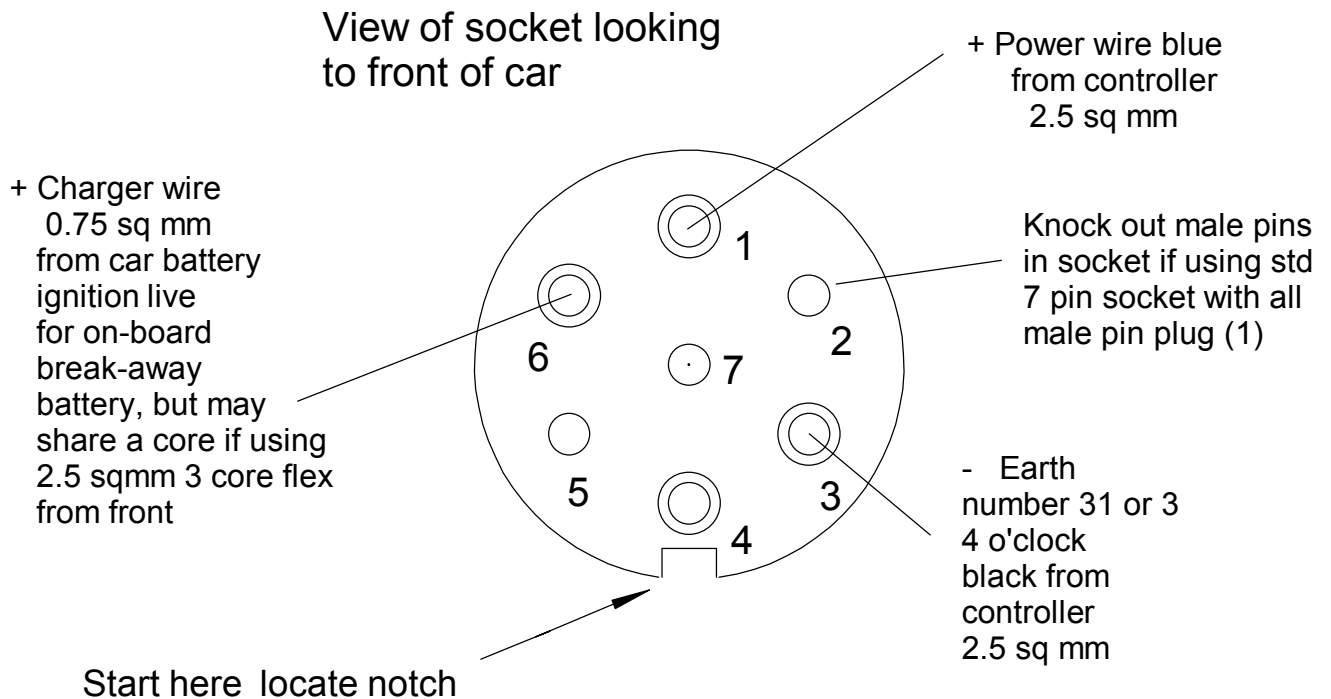

Note (1) For e brake connection a separate trailer wire and socket is required. To avoid mixing the plug with the normal tail lite connection, a socket and plug combination with all female socket and all male plug pins is available. However some rigs may have conventional 7 pin connectors. If a conventional 7 pin socket is fitted to the tow vehicle, the three male pins should be knocked out, so that the vehicle can be used with an all male trailer plug, if necessary

Sunpacer Manufacturing cc,
Pierre Joubert cell 074 104 7547

2013-04-09